


## Your sentry for safe entry



Storage Compartment

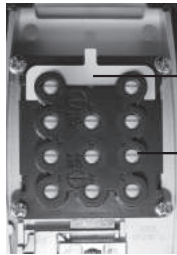

Setting Key

Yellow Dials



Yellow dial unset  
(Arrow towards you)

Yellow dial set  
(Arrow pointing away)



Using the pencil mark the position of the screw holes to be drilled

## INSTRUCTIONS

### Opening your lock

1. Open the Front Cover from the top to reveal the Push Buttons and the Opening Lever.
2. When purchased, no combination is set, push down the Opening Lever to open.

### Setting your personal combination

1. Open the Front Door to reveal the setting mechanism.
2. Remove the Setting Key.
3. Choose a combination and write it down prior to setting the lock. (A normal pin number is four digits, however we recommend using more numbers or choosing a name e.g DAVIS which would be 32847)
4. Using the Setting Key, turn the yellow dial of the chosen digit, e.g. 3, 180 degrees, so that the arrow is pointing away from you.
5. Back to the Front Door, repeat Push Buttons for each chosen number/letter.
6. Test combination prior to closing the lid (see note 1)
  - 6.1 After setting, if you push the opening lever, it will appear to be locked.
  - 6.2 Enter your combination to test the function.
  - 6.3 Before re-enter combination, please pull the Clear Button to clear number.
  - 6.4 Re-enter combination and push Lever to close.
7. Return Setting Key to original position for future use.

### Wall Mounting your lock

NOTE: you will require a X-head/Pozi screwdriver, pencil, a spirit level, drill bit, a drill and a hammer.

1. Open the front door, as above.
2. Position the lock on the desired mounting surface (see note 2)
3. Use a spirit level to check that the lock is vertical.
4. Mark the position of the screw holes on the desired surface.
5. Remove the lock.
6. Drill holes.
7. Use hammer to fit wall plug. (if necessary).
8. Position the lock.
9. Insert and tighten screws.
10. Close the storage compartment.

### NOTES:

1. You can change the combination at any time.
2. We suggest that you mount the lock in a discrete location away from direct view, such as porches, garage, out of direct eye line.
3. Keep front cover closed to increase weather resistance and to conceal the dials from view.