


## How to operate your lock


■ The factory preset combination is 0-0-0-0, even though the dials may appear in other numbers.

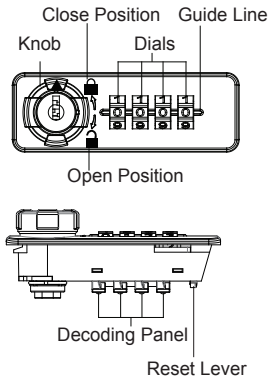

### TO OPEN:


Turn the dials and align the opening combination numbers with the Guide Line.

Turn the knob to the open position.

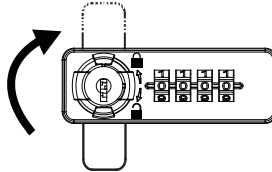

### TO LOCK:

Turn the knob to the close position.

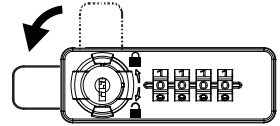

■ Due to various cabinets, you may need to turn the "Knob" 90° or 180° to operate your lock.

## How to reset your combination

■ The factory preset combination is 0-0-0-0, even though the dials may appear in other numbers.

1. Leave the dials at preset combination 0-0-0-0. (Fig. A)
2. Turn the Knob to the open position. (Fig. B)
3. Push the Reset Lever on the back of lock from "A" to "B" position. (Fig. C) Set your own desired combination.
4. Return the Reset Lever back to "A" position. (Fig. D) Your lock is now ready to open at its new combination.

 


Fig. A

 


Fig. B

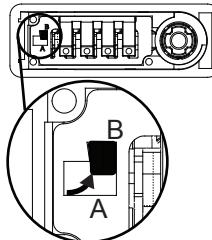


Fig. C

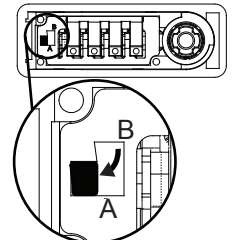


Fig. D

## How to decode the forgot combination

1. Insert the correct Master Key. Turn the Master Key clockwise to open the door.
2. Make sure to turn the Master Key counterclockwise back and then remove the Master Key from the lock. (Fig. F)



**NOTE: Do NOT remove the key at the moment. (Fig. E)**



Fig. E

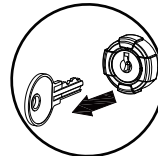


Fig. F

3. Press down the Decoding Panel, keep holding it and rotate the dial till the Decoding Panel sinks or there is a "click" sound. (Fig. G). Repeat the same process for all dials, you will get the opening numbers.

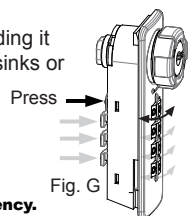


Fig. G

■ The Master Key operation may be used at any time to open a lock in an emergency.  
 ■ Always keep your secret combination in a safe and accessible place for future reference.