

SNAP FITTING "SnapX"

- high quality furniture fittings




- For min. 10 mm panel thickness
- White PC material
- Fast & easy assembly
- Invisible installation
- No special drilling tool required
- Perfect for flat pack furniture

Item No.:

Male pin	# 11.06.003
Female bushing - 7 mm	# 11.06.005
Female bushing - 12 mm	# 11.06.007

PATENTED

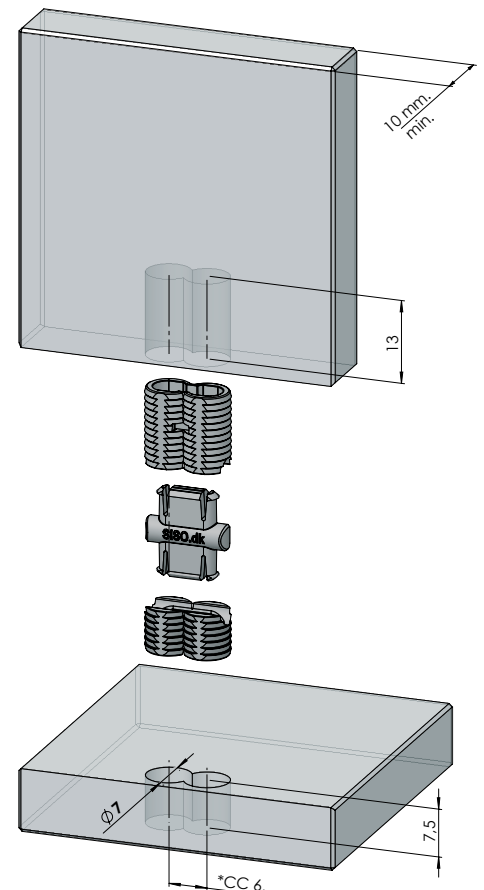

SNAP FITTING "SnapX"

Combine short and long bushings for optimal strength

Short bushings – for panel face installation when panel thickness is between 10 – 16 mm.

Long bushings – for stronger anchoring in the rear edge.




1. Drill the required holes in the panel.



2. Apply a small amount of glue to the holes.



3. Gently tap the female bushings into place using a soft hammer.

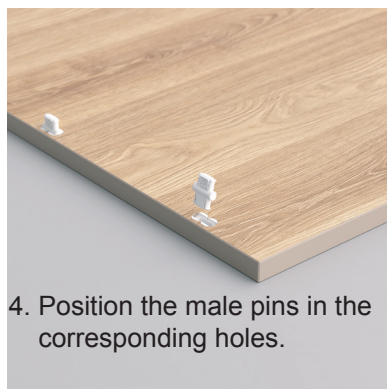

4. Position the male pins in the corresponding holes.



5. Gently tap the male pins into place using a soft hammer.



6. Align the panels and fittings.



7. Press the panels together until they snap into place.



8. Assembly complete – a strong, invisible connection.

SISO A/S

Mileparken 11 Phone: (+45) 45 830 900
DK - 2740 Skovlunde (Copenhagen) E-mail: siso@siso.dk
Denmark Web: www.siso.dk