

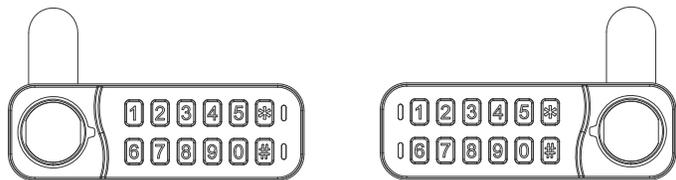


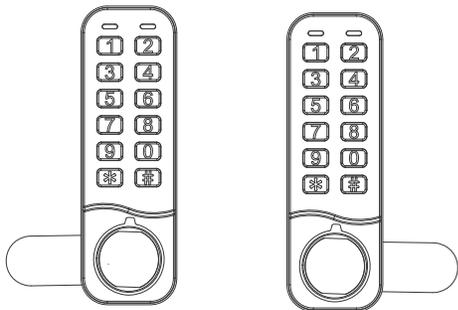



# "VIC" ELECTRONIC KEYPAD LOCK

## Installation Guide




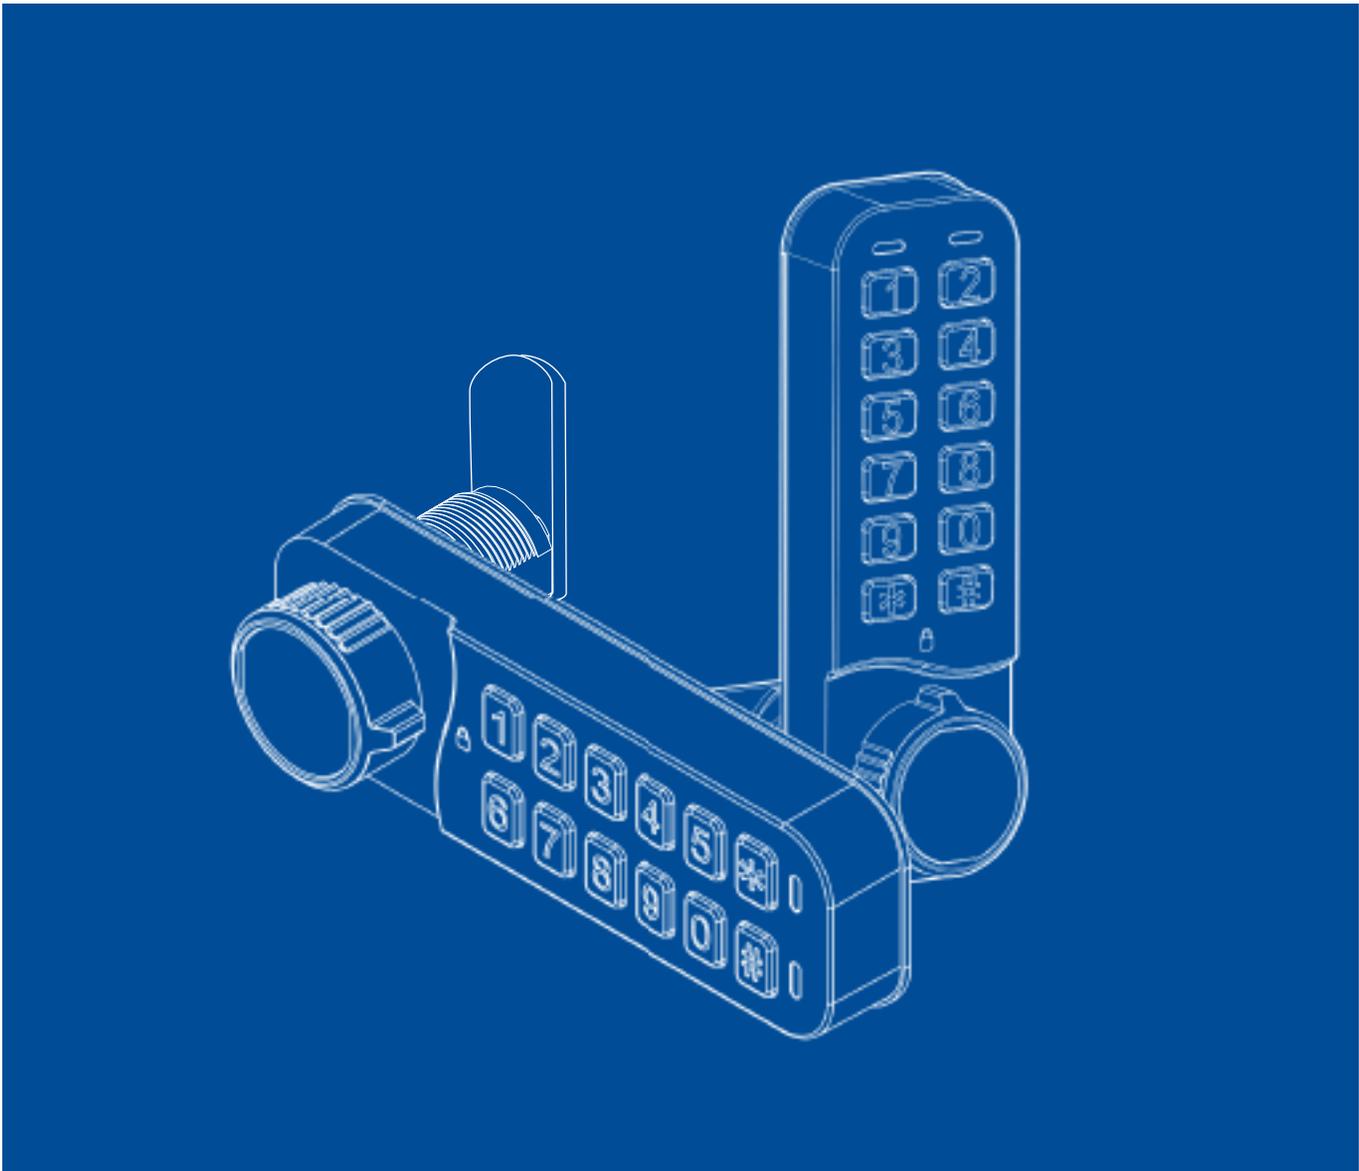


## Installation Procedure



### 1. Lock Body

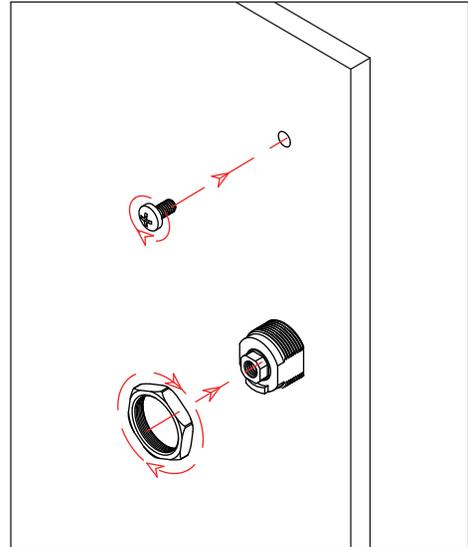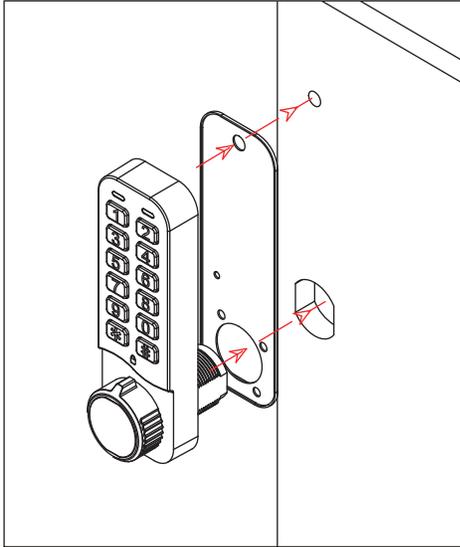

### 3. Cam

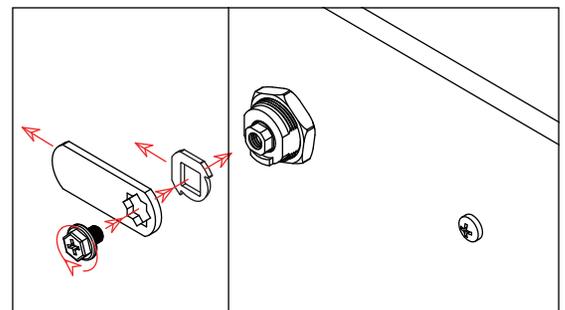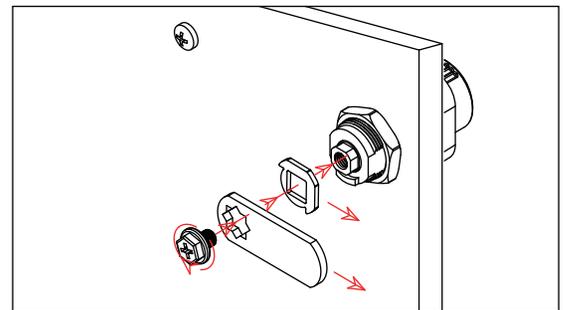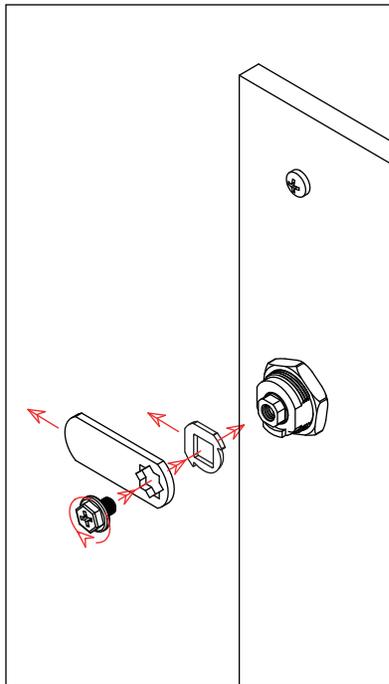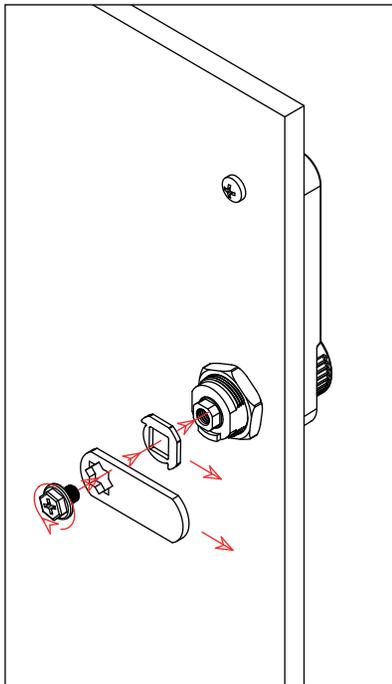


## Installation Hole

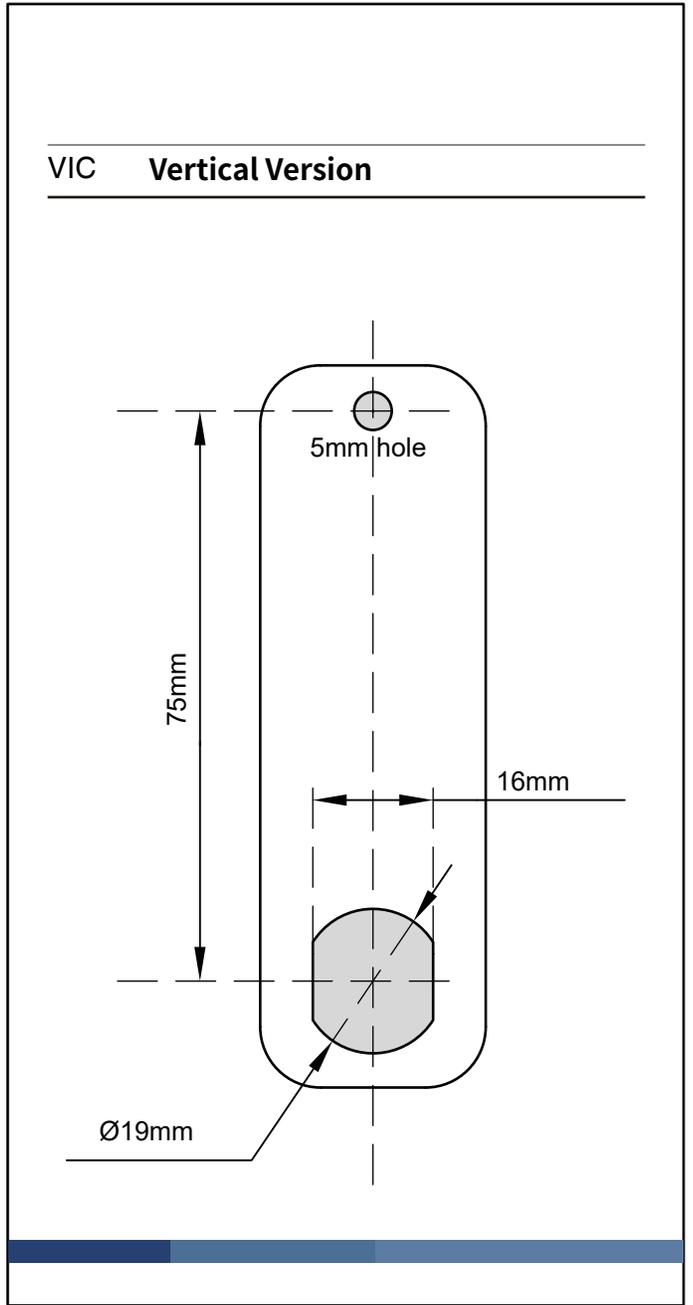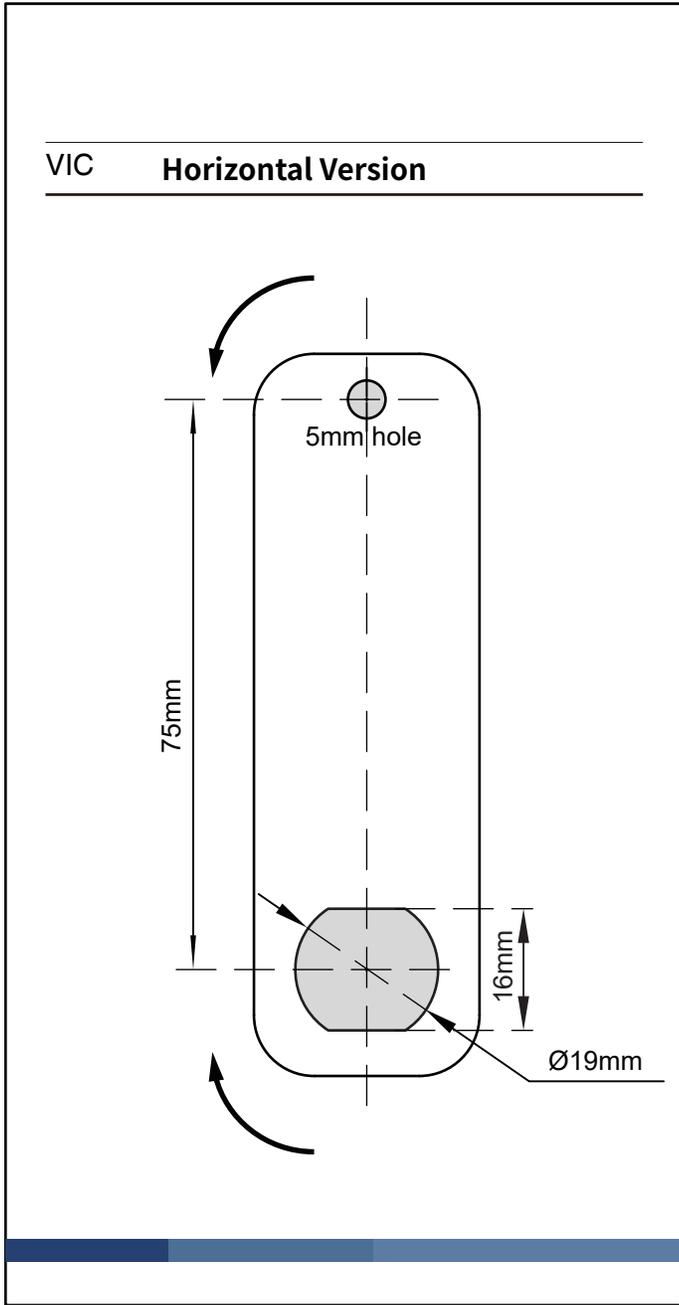


## Battery Change


### 1. Take off the Cam

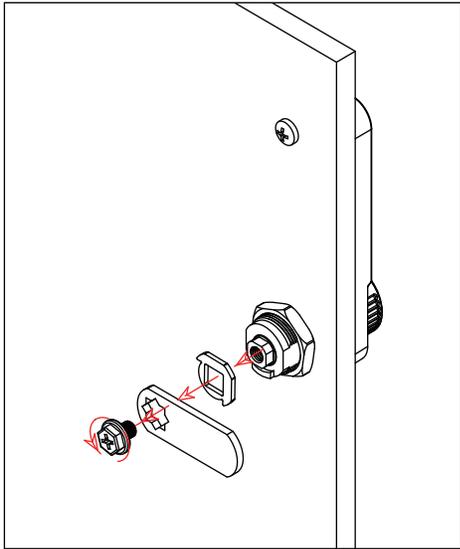


### 2. Take off the nut

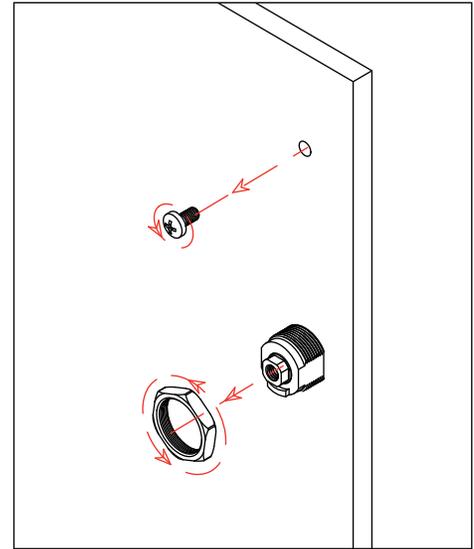

### 3. Take out the battery cover and battery

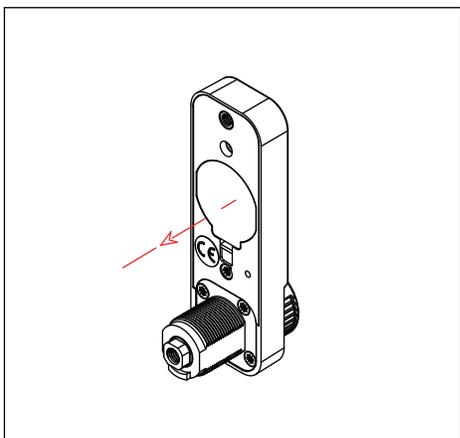

### 4. Change new battery

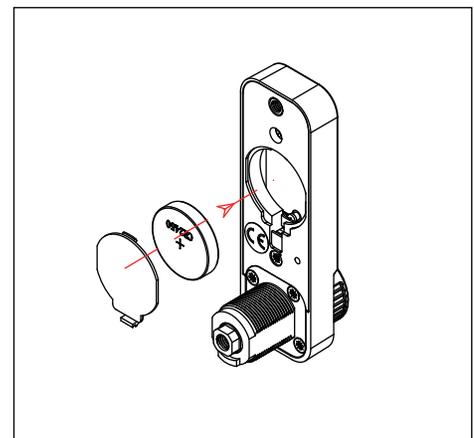

### **IMPORTANT!!!**

CR2450 battery with minimum  
590 mAh is to be used  
(Energizer or Panasonic is  
recommended)