

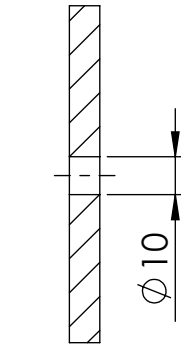
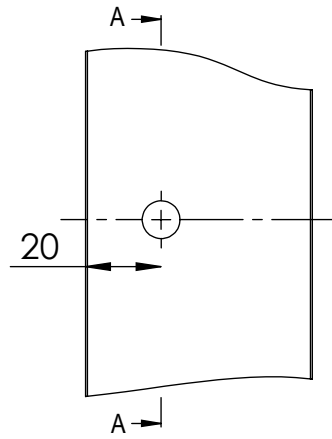




Wooden door setup - no POM washer needed.

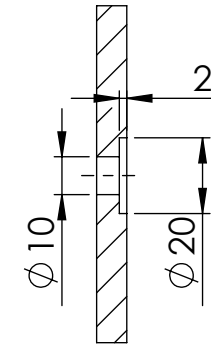



SECTION A-A

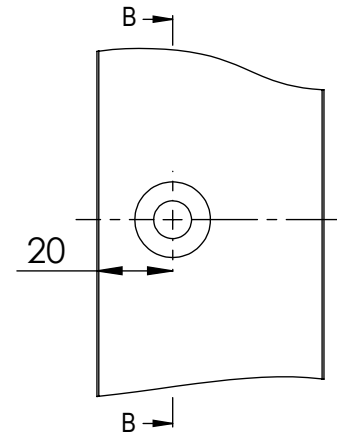

SECTION B-B

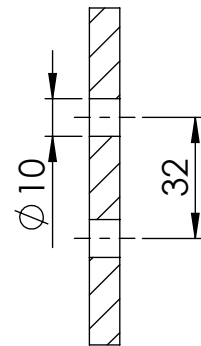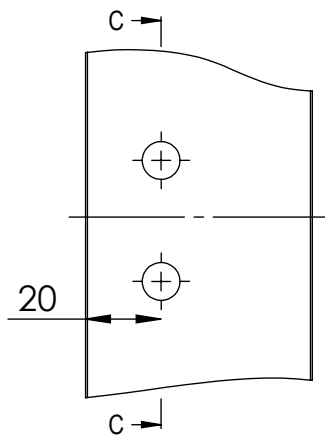

SECTION C-C

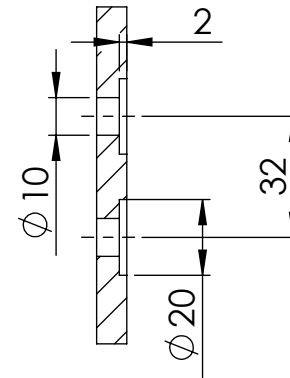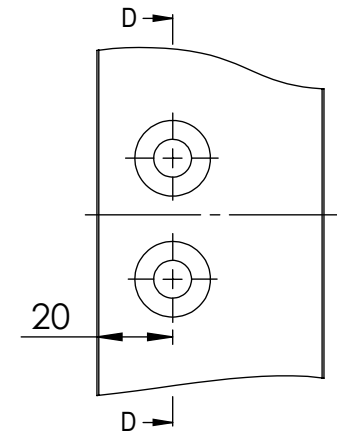

SECTION D-D